


## NPRM-1/2 Assembly Non-Penetrating Roof Mount


**CAUTION - SHARP EDGES - WEAR GLOVES!**

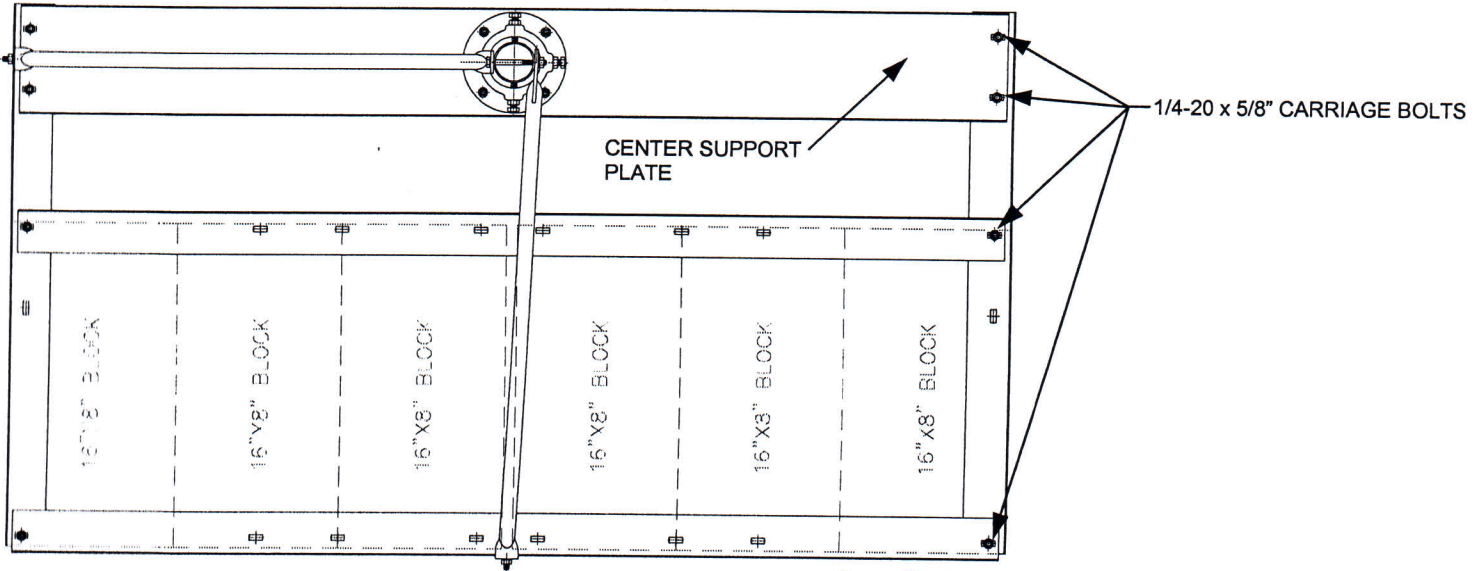

**Figure 1 (Top View)**

**Supplied Components and Hardware:**

- \* 2 - Base Frames
- \* 1 - NPRM-1/2 Base Frame Short (Left)
- \* 1 - NPRM-1/2 Base Frame Short (Right)
- \* 1 - Center Support Plate
- \* 1 - 244 Flange
- \* 1 - Front Brace
- \* 1 - Side Brace
- \* 1 - NPRM Hardware Package.
- \* 1 - 244A Flange Hardware Package
- \* 1 - 3' Mast

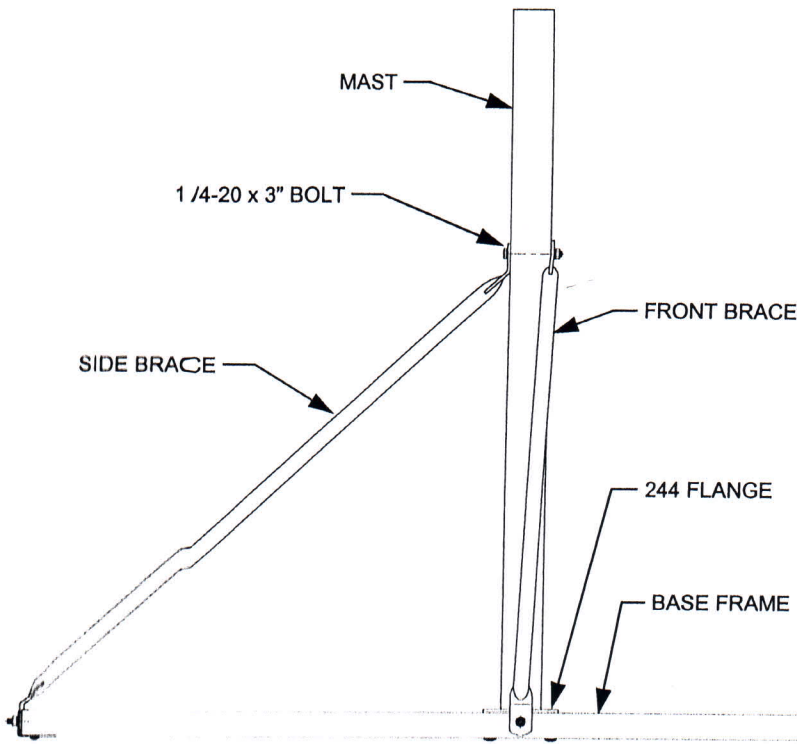

**Figure 2 (Front View)**

1 - Assemble the Base Frame, Center Support Plate, and 244 flange to of the mount using the supplied 1/4-20 x (5/8 and 3/4) Carriage Bolts, Lock washers and Hex Nuts. Make sure to assemble the Bolts with the Heads facing down so that they are on the under side of the frame (See Figures 1&2).

2 - Slide the mast into position and assemble the Side and Front Braces to the Base Frame using the 1/4-20 x 3/4" Carriage bolts.

3 - Assemble the other end of the Braces to the Mast using the supplied 1/4-20 x 2-3/4" Bolt, Lock washer and Hex Nut (See Figures 1&2). Tighten the assembly securely and weigh down appropriately. The NPRM-1/2 will accept 6-16"x8" or 4-12"x12" concrete blocks.